

## The Flux Capacitor

Each Flux configuration starts with a starter unit – which can be single or double wide and up to 5 high.

Then simply add your add-on units & accessories to suit your needs.

**1**

## Link

Use the linking bracket to connect single or double units at straight or 90° angles

**2**

## Accessories

Customise your Flux units by adding shelves, cubbies or planters. The possibilities are endless.

**3**